

EpiSmooth

INSTRUCTION MANUAL

General Information:


- Epilation is easier just after a bath or shower. Make sure your skin is completely dry when you start to epilate.
- When you use the appliance for the first time, we advise you to try it out on an area with only light hair growth.
- For optimal epilating results, the hairs should not be longer than 10 millimeters.

To Use:

- Switch on & glide gently over area to be treated.
- Note: Your skin may become a little red and irritated the first few times you use the epilator. This is normal and will quickly disappear. As you use the appliance more often, your skin gets used to epilation, skin irritation decreases and regrowth becomes thinner and softer. If the irritation has not disappeared within three days, we advise you to consult a doctor.

To Clean:

- Clean the epilating head after every use.
- Make sure the appliance is switched off & remove the epilating head by pulling up.
- Use brush included to wipe away hair.
- Do not submerge in water.

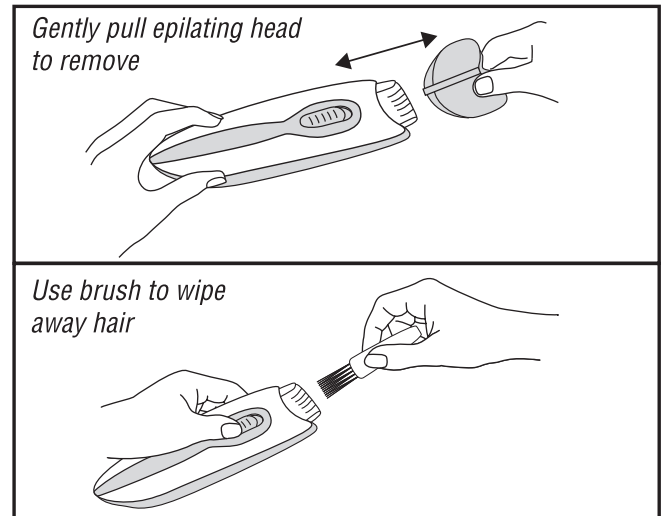

To replace batteries—slide open back cover. Requires 2 AAA batteries (not included).

EpiSmooth

MODE D'EMPLOI

Renseignements généraux :


- L'épilation est plus facile après le bain ou la douche. Assurez-vous que votre peau est complètement sèche lorsque vous commencez à épiler.
- Lorsque vous utilisez l'appareil pour la première fois, nous vous recommandons de faire un test sur une zone avec peu de poils.
- Pour obtenir des résultats optimaux, les poils ne doivent pas dépasser 10 millimètres de longueur.

Mode d'emploi :

- Allumez l'appareil et faites le glisser doucement sur la zone à épiler.
- Note : Votre peau peut devenir rouge et irritée lors des premières utilisations de l'appareil. C'est normal et ça disparaîtra rapidement. Les irritations disparaîtront au fur et à mesure que vous utiliserez l'appareil et la repousse sera plus mince et douce. Si l'irritation persiste après trois jours, veuillez consulter un médecin.

Nettoyage :

- Nettoyez la tête d'épilation après chaque utilisation.
- Assurez-vous que l'appareil est hors fonction et enlevez la tête en la tirant vers le haut.
- Utilisez la brosse fournie pour éliminer les poils.
- Ne plongez pas l'appareil dans l'eau.

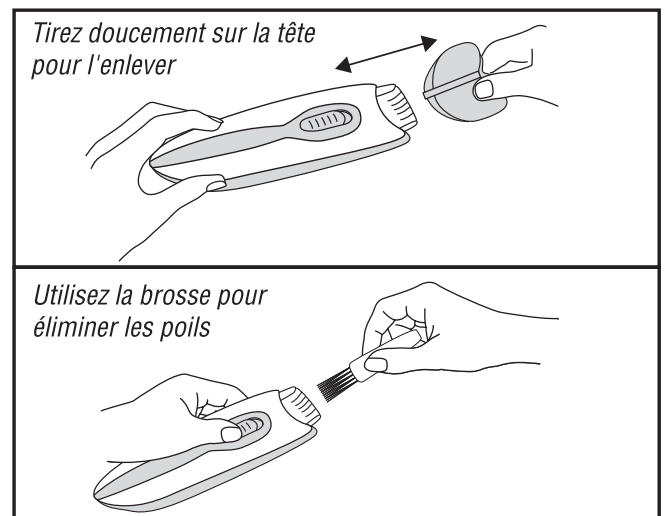

Remplacement des piles - Glissez le couvercle arrière. Requier 2 piles AAA (non incluses)

Distributed by / Distribué par:
Supertek Canada Inc., Mont-Royal, QC H4T 1X2
Customer service / Service à la clientèle: **1-800-304-8354**
Made in China / Fabriqué en Chine